



BS Uredaj CRD 47 je MP3 kompatibilni radio s funkcijom CD čitača. Uređajem se može upravljati neposredno ili preko kontrolne table CCA 47 marke Bosch.

Ovim Robert Bosch Car Multimedia GmbH izjavljuje da je radio oprema tipa CRD 47 u skladu sa navodima Direktive 1999/5/EZ i/ili 2014/53/EU. Cijeli tekst EU izjave o usklađenosti dostupan je na internetskoj adresi navedenoj u nastavku.



Bezbjednosne napomene koje se odnose na uređaj možete naći u uputstvu za upotrebu uređaja. Uputstvo za upotrebu i izjavu o usklađenosti uređaja možete preuzeti na internetu na [www.bosch-professional-systems.com](http://www.bosch-professional-systems.com).

SR Uredaj CRD 47 je MP3 kompatibilni radio s CD plejerom. Uređajem se može upravljati neposredno ili putem kontrolne table CCA 47 marke Bosch.

Robert Bosch Car Multimedia GmbH ovim izjavljuje da je radio oprema tipa CRD 47 u skladu s navodima Direktive 1999/5/EZ i/ili 2014/53/EU. Ceo tekst EU izjave o usaglašenosti dostupan je na dole navedenoj internet adresi.

Bezbednosne napomene u vezi s uređajem možete naći u uputstvu za upotrebu uređaja. Uputstvo za upotrebu i izjavu o usaglašenosti uređaja možete preuzeti na internetu na [www.bosch-professional-systems.com](http://www.bosch-professional-systems.com).

| TECHNICAL DATA                                                       |        |                                                  |                  |
|----------------------------------------------------------------------|--------|--------------------------------------------------|------------------|
| Power supply                                                         |        | 24 V                                             |                  |
| Current consumption in operation<br>Max. current<br>Stand-by current |        | Approx. XXX?, FM 1 kHz<br>Approx. 5 A<br>< 10 mA |                  |
| Frequency ranges                                                     | Europe | FM                                               | 87.5 – 108 MHz   |
|                                                                      |        | MW                                               | 531 – 1602 kHz   |
| NAFTA                                                                |        | LW                                               | 153 – 297 kHz    |
|                                                                      |        | FM                                               | 87.7 – 107.9 MHz |
|                                                                      |        | AM                                               | 530 – 1710 kHz   |
| Input sensitivity<br>AUX:<br>Microphone:<br>Tel./Navi input          |        | 2 V / 10 kΩ<br>1 mV / 2 kΩ<br>1 V / 10 kΩ        |                  |
| Distortion factor (40 Hz - 9 kHz)                                    |        | 0,2 %                                            |                  |
| Output power                                                         |        | 2 x 20 W (4 Ω, 1 kHz / 10 %)                     |                  |
| Operating temperature                                                |        | -20 °C to +70 °C                                 |                  |
| Storage temperature                                                  |        | -40 °C to +85 °C                                 |                  |
| Dimensions (W x H x D)                                               |        | 187.5 x 58.5 x 187.2 mm                          |                  |
| Weight                                                               |        | Approx. 1.3 kg                                   |                  |
| Certification                                                        |        | FCC, CE, UN ECE R10                              |                  |
| Tested acc                                                           |        | UN ECE R118                                      |                  |

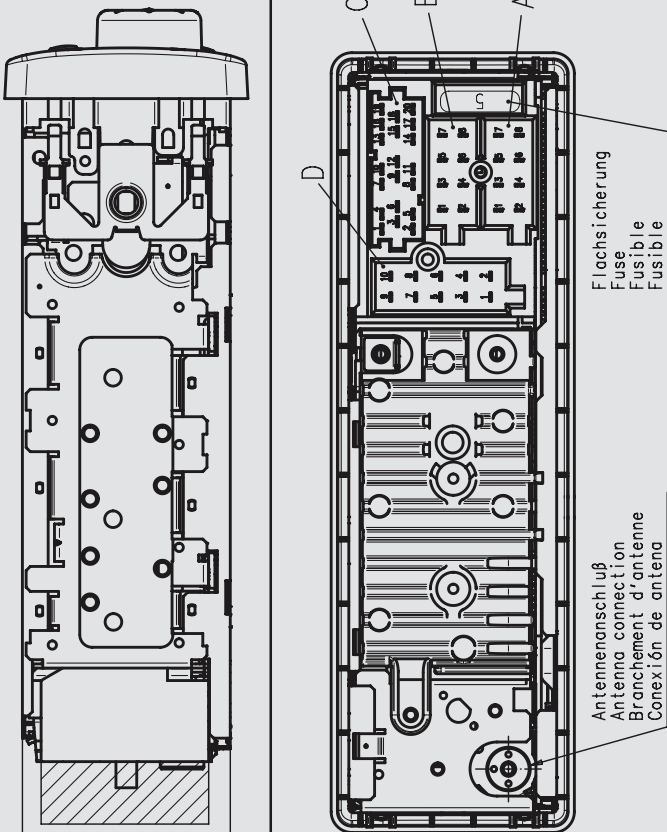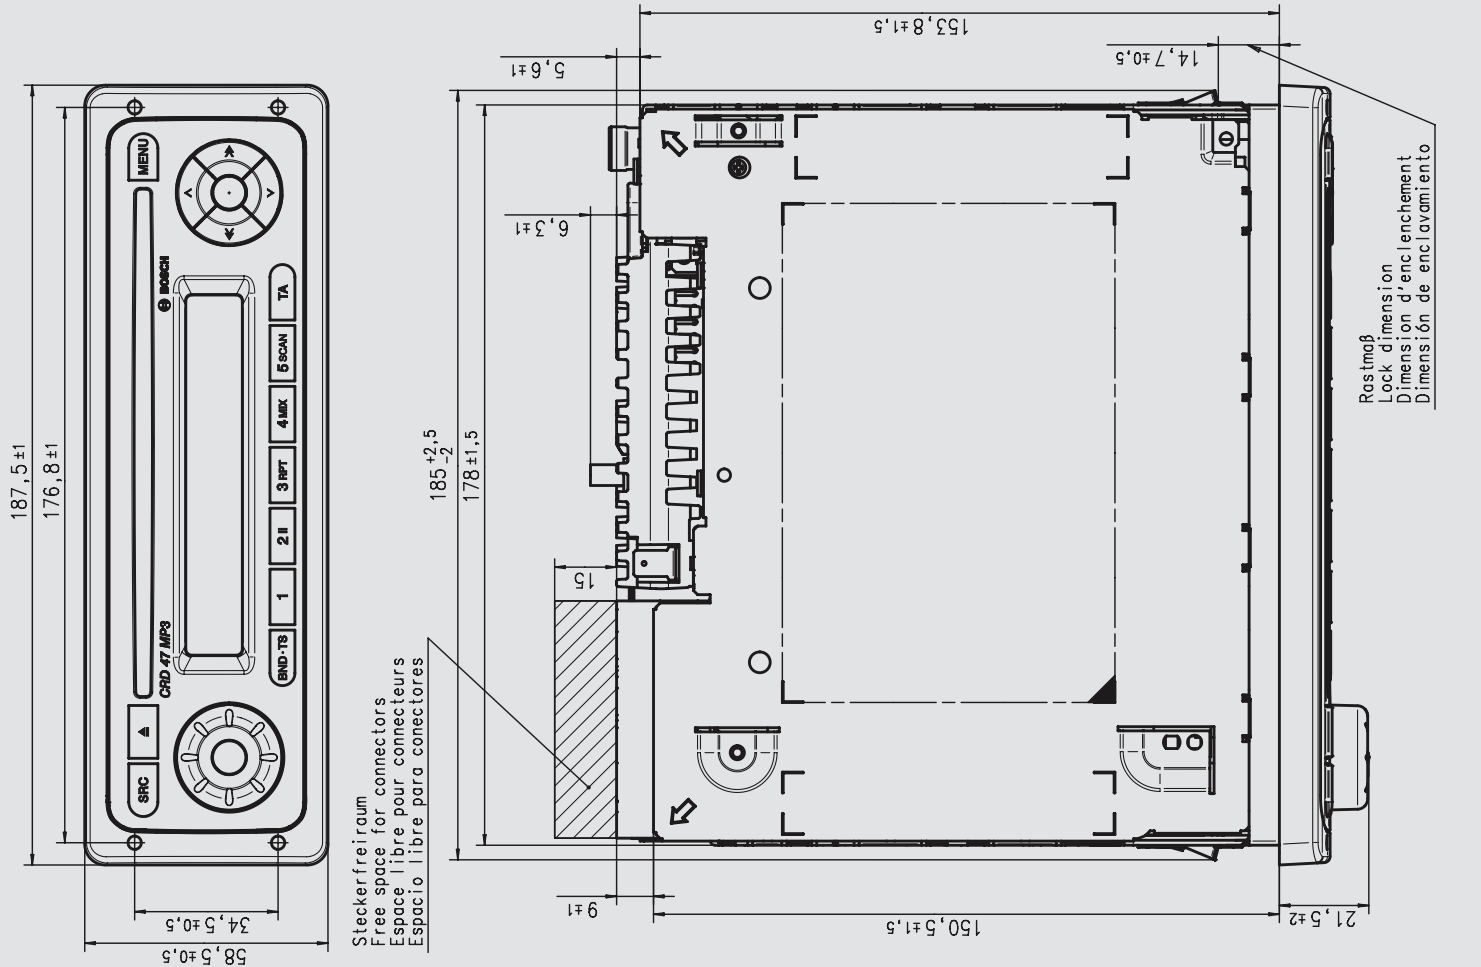

| Steckerbelegung / Pinning / Occupation du connecteur / Alocación de las bornes |                                |                         |                      |
|--------------------------------------------------------------------------------|--------------------------------|-------------------------|----------------------|
| A-1<br>---                                                                     | C-1<br>RADIO OUT LEFT (FIX)    | D-1<br>MIC AF (+)       | MIC 1<br>MIC 2       |
| A-2<br>---                                                                     | C-2<br>RADIO OUT RIGHT (FIX)   | D-2<br>MIC AF (-)       |                      |
| A-3<br>---                                                                     | C-3<br>RADIO/CD GND            | D-3<br>MIC 1 REMOTE     |                      |
| A-4<br>IGNITION (+24V)                                                         | C-4<br>CD OUT LEFT (FIX)       | D-4<br>MIC 2 REMOTE     |                      |
| A-5<br>ANTENNA/AMP ON (+12V)                                                   | C-5<br>CD OUT RIGHT (FIX)      | D-5<br>MIC 2 AF (+)     |                      |
| A-6<br>ILLUMINATION                                                            | C-6<br>CCA ON (+12V OUT)       | D-6<br>MIC 2 AF (-)     |                      |
| A-7<br>BATTERY (+24V)                                                          | C-7<br>PHONE AF-IN             | D-7<br>MIC 1 REMOTE GND |                      |
| A-8<br>GROUND/MINUS                                                            | C-8<br>PHONE GND               | D-8<br>MIC 2 REMOTE GND |                      |
|                                                                                | C-9<br>PHONE REMOTE            | D-9<br>----             |                      |
|                                                                                | C-10<br>----                   | D-10<br>----            |                      |
|                                                                                | C-11<br>PHONE/MIC AF-OUT       |                         | 2x<br>MIC 1<br>MIC 2 |
|                                                                                | C-12<br>PHONE/MIC GND          |                         |                      |
|                                                                                | C-13<br>CDC/TMC DATA-IN        |                         | 2x<br>MIC 1<br>MIC 2 |
|                                                                                | C-14<br>CDC/TMC DATA-OUT       |                         |                      |
|                                                                                | C-15<br>CDC BATTERY (+24V)     |                         | 2x<br>MIC 1<br>MIC 2 |
|                                                                                | C-16<br>CDC ON (+12V OUT)      |                         |                      |
|                                                                                | C-17<br>CDC/TMC DIGITAL GND    |                         | 2x<br>MIC 1<br>MIC 2 |
|                                                                                | C-18<br>CDC AF/AUX AF-GND      |                         |                      |
|                                                                                | C-19<br>CDC AF/AUX AF-IN LEFT  |                         | 2x<br>MIC 1<br>MIC 2 |
|                                                                                | C-20<br>CDC AF/AUX AF-IN RIGHT |                         |                      |

NOTE:  
Block C1 is for CCA  
Block C2 for PHONE  
Block C3 for CDC/AUX IN